

Air Filter Maintenance Instruction

1. Turn off the petcock to closed position and use an Allen key to loosen 4 bolts to remove the front skid plate.



2. Take off the airbox bottom rubber cap. Next, remove the air filter.



3. Next, remove the outside pre-filter.



4. Use pressure air to clean up the air filter and the pre-filter. (From outside to inside.)



5. Next, put a little oil on the pre-filter and make sure all sponge has oil, this work can avoid fine dust to get into the engine.



6. Install pre-filter to the air filter and put back the air filter to the airbox. (Put some grease inside the air filter tube and make sure push all the way in.)



7. Put back air filter into airbox.(Need to ensure there are no gaps on either side.)



8. Put back the airbox bottom rubber cap and use an Allen Key to fasten 4 bolts.

